F1925 LCD Monitor
User's Guide

mpc™

Table of Contents

User's Guide **3**
Packing List **3**
Safety Information **3**
LCD Monitor Features **5**
Setup Instructions **6**
Monitor Base 6
Power Cord and Power Adapter 6
Video Cables 8
Adjusting the Viewing Angle **8**
Operating Instructions **9**
General Instructions 9
Front Panel Controls 9
Accessing the Adjustment Controls 10
Adjusting the Picture 11
Cleaning the Monitor 13
Monitor Drivers **13**
Warranty Information **14**
Features **14**
Energy Star Standards 14
Plug & Play DDC1/2B Feature 14
Appendix A — Troubleshooting **15**
Appendix B — On-Screen Messages **17**
Appendix C — Factory Preset Timing **18**
Appendix D — VESA Mounting **19**
Appendix E — Connector Pin Assignment **20**
Appendix F — Acceptable LCD defects **21**
Appendix G — Monitor Specifications **22**
Appendix H — FCC Notice **24**

USER'S GUIDE

This user's guide provides important information about operating your monitor. Before using the monitor, please read this guide thoroughly and then save it for future reference.

PACKING LIST

Before setting up and using your monitor, examine the items in the monitor package. If anything is missing or damaged, please contact MPC immediately. Look for the following items:

- 19" LCD Monitor
- *F1925 LCD Monitor User's Guide*
- 100/120 VAC rated Power Cord
- External Power Adapter Brick (12 VDC)
- Monitor Base
- DB-15 Analog video cable
- DVI-D Digital video cable

Note: Save the original shipping carton and packing materials for transporting your monitor in the future. If you transport the monitor over long distances, completely repackage the monitor in its original packing material.

SAFETY INFORMATION

- Do not use the monitor near standing bodies of water or in humid envirionments.
- Set the monitor on a flat, stable surface. Do not place it on an unstable cart, stand, or table. If the monitor falls, it might injure a person and/or cause serious damage to the monitor.
- When placing the monitor on a cart or stand, use only a cart or stand recommended by the manufacturer or sold with the monitor. If you mount the monitor on a wall or shelf, use a mounting kit approved by the manufacturer and follow the kit instructions.
- Slots and openings in the back and bottom of the monitor are provided for ventilation. To ensure reliable operation of the monitor, and to protect it from overheating, these openings must not be blocked or covered. Do not place the monitor on a bed, sofa, rug, or similar surface. This monitor must never be placed near or over a radiator or heat register. This monitor must not be placed in a built-in enclosure of any kind unless proper ventilation is provided.

- The monitor must only be connected to the AC power source as indicated on the label. If you are unsure of the type of AC power available, ask your local power company. Only connect this monitor to a power outlet that matches the power requirements of this monitor.
- The monitor is equipped with a three-prong, grounded plug (a plug with a third pin for grounding). For safety purposes, this plug will only fit into a grounded power outlet. If your outlet does not accommodate the three-wire plug, have an electrician install the correct type of outlet, or use an adapter to ground the appliance safely.
- During a lightning storm, unplug the monitor. Also unplug the monitor when it will not be used for a long time. This will protect the monitor from damage due to power surges.
- Do not overload power strips and extension cords. Overloading power strips and extension cords can result in a fire or electric shock.
- Never push objects of any kind into the monitor through openings. The objects could touch dangerous voltage points or short out parts, possibly resulting in an electric shock or a fire hazard.
- Never spill liquid of any kind on the monitor. If this occurs, disconnect from the power source immediately.
- Do not attempt to service the monitor yourself. Opening or removing the monitor's cover can expose you to dangerous voltages and other hazards. Please refer all servicing to qualified service personnel.
- To ensure satisfactory operation, only use the monitor with UL listed computers that have the appropriate configured receptacles marked between 100–240 VAC, Min. 3.5A.
- Do not allow anything to rest on the power cord. Do not place the monitor where people might walk on the cord.
- Do not place the monitor in direct sunlight, or where it is near excessive dust, mechanical vibration, or shock.
- This monitor is for use only with the included power adapter (output 12Vdc) that has a UL CSA listed license.

Warning: To prevent a fire or shock hazard, do not expose the monitor to rain or moisture. Dangerously high voltages are present inside the monitor. Do not open the monitor cabinet. Refer servicing to qualified personnel only.

Warning: Keep all packing materials away from children.

LCD MONITOR FEATURES

- 19-inch (48.0 cm) TFT Color LCD Monitor
- 75 mm x 75 mm VESA Mounting Pad (removable base)
- EPA ENERGY STAR®
- Ergonomic Design (MPRII Approved)
- Space Saving, Compact Case Design
- Dual Input – Analog and Digital

The following occurrences are normal with an LCD monitor and do not indicate a problem.

- Due to the nature of the internal fluorescent backlights, the screen may flicker during initial use. If this occurs, turn off the monitor and then turn it on again, making sure the flicker disappears.
- You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
- The LCD screen has an effective pixel count of 99.99% or more. It may include blemishes of 0.01% or less, such as a missing pixel or a pixel lit all of the time. Refer to Appendix F – Acceptable LCD Defects for additional details.
- The life of the internal fluorescent backlights used in the LCD monitor is approximately 10,000 hours. Contact MPC technical support or an authorized dealer for a replacement when the screen is dark, flickering, or not lighting up. Never attempt to replace the light yourself. Refer servicing to qualified personnel only.

SETUP INSTRUCTIONS

The following sections provide information about attaching the base to your monitor and using the power cord and video cable.

Monitor Base

To install the monitor base, place the monitor in the base until it snaps into place. To remove the monitor base, gently turn the monitor upside down and press the four retention clips apart to release the base. Pull the base straight away from the monitor. See Figure 1 below.

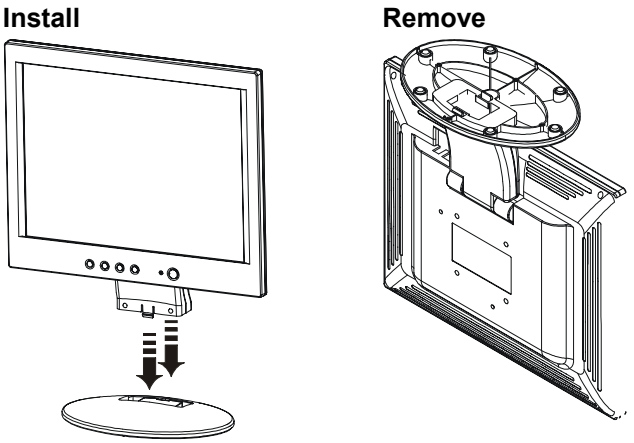

Figure 1: Installing and Removing the Monitor Base

Power Cord and Power Adapter

Before connecting your monitor's power cord and adapter, read the guidelines below:

- Use only the Power Adapter included with your monitor. One of the two Power Adapters listed below should be included. You will find the following markings on the Power Adapter included with your monitor:
  - **Manufacturer: Polaris Electronics (Dong guan) Co; Ltd. (CHI SAM)**
    Model: CH -1205
    Output: 12 VDC 5 A
  - **Manufacturer: TPV Electronics (FUJIAN) CO., LTD**
    Model: ADPC-12V Series
    Output: 12 VDC 5 A

- This monitor has a universal power supply. It can operate in either a 100/120 VAC or 220/240 VAC voltage area (no user adjustment is required).
- Make sure the power cord meets the specifications and requirements for your area. The power cord included with your monitor is rated for 100/120 VAC.

To connect the power cord to your monitor and a power source, follow the steps below:

Caution: If the AC outlet is not grounded (with three holes), install the proper grounding adapter (not supplied).

1 Plug the AC power cord into the supplied external power adapter brick. Plug the small end of the power adapter cord (DC Plug) into your monitor's power input socket (DC Jack). See Figure 2.

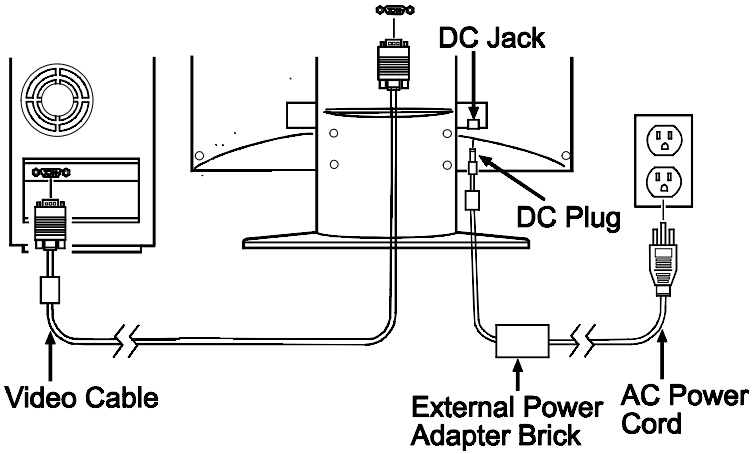

Figure 2: Connecting Cables

2 Plug the other end of the power cord into a three-pin AC power outlet or a UL-approved power strip.

Note: A certified power supply cord must be used with this equipment. The relevant national installation and/or equipment regulations need to be considered. A certified power supply cord not lighter than ordinary polyvinyl chloride flexible cord according to IEC 60227 (designation H05VV-F 3G 0.75mm or H05VVH2-F2 3G 0.75mm) should be used. As an alternative, a flexible cord of synthetic rubber, according to IEC 60245 (designation H05RR-F 3G 0.75mm), can be used.

Video Cables

The monitor comes with separate video cables for analog and digital connections. The cable you choose to use will depend on the input type you select. The analog cable has a blue 15 pin connector at each end. The digital cable has a white 24+ pin connector at each end.

Caution: Do not bend the signal cable excessively, or you might break the wires inside the cable.

1. Plug the video cable connector (see Figure 2 on page 7) into the computer's video port, taking care not to bend any pins on the connector.
2. Tighten the two screws on the video connector with your fingers to secure the connection.

Note: Over-tightening this connection can damage the monitor cable or your computer's video card.

ADJUSTING THE VIEWING ANGLE

- For optimal viewing, look at the full face of the monitor, and then adjust the monitor's angle to your own preference.
- Hold the base so the monitor does not fall when you change the monitor's angle.
- You are able to adjust the monitor's angle from -5° to 25°.

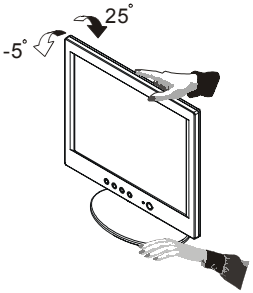

Figure 3: Adjusting the Monitor's Angle

Caution: Do not touch the LCD screen when you change the angle, or the screen may become damaged or broken.

Warning: Be careful not to pinch your fingers when adjusting the monitor's angle.

OPERATING INSTRUCTIONS

The following sections provide information about operating and adjusting your monitor.

General Instructions

To turn on the monitor, do the following:

1. Check that the power supply is connected to the monitor and a power outlet or socket.
2. Check that the video cable is connected to your computer's video port.
3. Locate the power button (see figure and table on page 10).
4. Press the power button. The power indicator will light up. The monitor features a unique quick-switch system, so a picture should appear within seconds after the monitor is turned on.

Front Panel Controls

The power button is located on the right side of the front panel of the monitor as you are facing it. The buttons above the power button are for adjusting the monitor's picture and accessing the OSD. See the figure below and the table on page 10 for the layout and names of the control buttons.

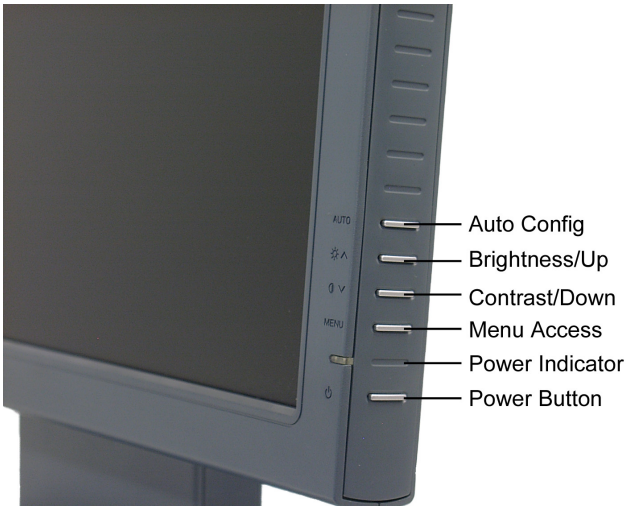

Figure 4: Control Buttons

Table 1: Control Buttons Descriptions

Feature		Description
1	Auto Config/Exit	The Auto Config button is used to automatically set the H-Pos, V-Pos, Clock, and Focus. Press and hold this button for 2 seconds to begin the auto config cycle. The Auto Configuration function is disabled when the digital input is selected. This adjustment is not necessary with a digital source. This also acts as the Exit button. Press it to close the OSD menu. This will also back out of a menu selection.
2	Brightness ☼ / ▲	Press this button to adjust your monitor's brightness. If the OSD is open, this button will move through the selections in a clockwise direction.
3	Contrast ◑ / ▼	Press this button to adjust your monitor's contrast. If the OSD is open, this button will move through the selections in a counter-clockwise direction.
4	Menu/Enter	Press this button to open the On Screen Display (OSD) menu or to select an adjustment icon within the OSD.
5	Power Indicator	Power Indicator: Green = power on mode (normal operation) Orange = low power mode (low power consumption; no picture)
6	Power Button	Press this button to turn the monitor on and off.

Accessing the Adjustment Controls

The following list explains how to access and use the adjustment controls appearing in the On Screen Display (OSD) Main Menu:

1. Press the Menu button to make the OSD window appear. The menu will look like Figure 5.
2. Press the ▲ or ▼ buttons to select the desired function.
3. Press the Menu button to select the function that you want to adjust.
4. Press the ▲ or ▼ buttons to change the settings of the current function.
   - When the OSD window is active, it shows the input signal timing. The **H** stands for the horizontal frequency and **V** for the vertical frequency.
   - To exit and save, select the exit functions, or leave the monitor alone for 10 seconds. To adjust any other function, repeat 2-4.

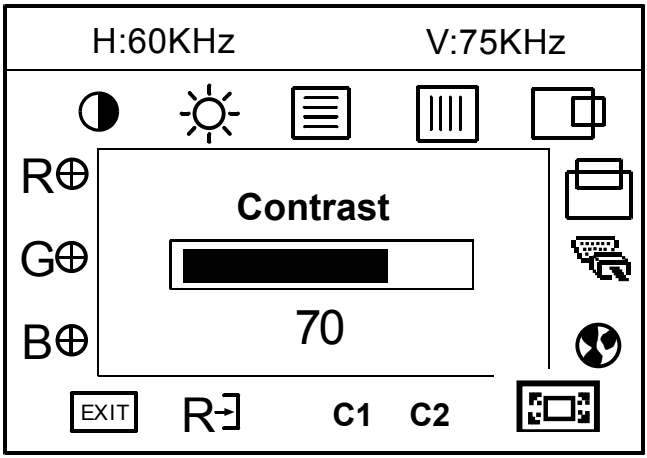

Figure 5: **On Screen Display (OSD) Menu**

Note: If you do not make any OSD menu adjustments or selections for more than 10 seconds, the current setup will be saved, and the OSD will disappear automatically.

Adjusting the Picture

The table below describes the functional control icons that appear on the OSD menu.

Table 2: **Functional Control Icons**

Function	Icon	Description
Contrast		Use this function to adjust the picture's contrast.
Brightness		Use this function to adjust the picture's brightness.
Focus		Use this function to adjust the picture's focus. The Focus adjusts the phase of the pixel clock signal. With a wrong phase adjustment the picture has horizontal disturbances or lines in a bright picture.
Clock		Use this function to adjust the picture's clock. The Clock (pixel frequency) controls the number of pixels scanned by one horizontal sweep. If the frequency is not correct, the screen shows vertical stripes and the picture will not be the correct width.

H-Position		Use this function to adjust the picture's horizontal position.
V-Position		Use this function to adjust the picture's vertical position.
Input Select		Use this function to select analog or digital input. When Digital is selected the following controls will be disabled: Clock, Phase, H-Position and V-Position. These adjustments are not necessary with a digital source.
Language		Use this function to select which language the monitor will use to display the instructions.
Picture Scaling		Use this function to switch scaling modes on this display. They are as follows: • **Full Mode** performs anti-aliasing on the off-native resolutions it supports while stretching the picture horizontally and vertically to fill the full screen. At this setting some picture distortion may occur. • **Aspect Mode** performs anti-aliasing on the off-native resolutions it supports while stretching the picture horizontally to fill the width of the screen. At this setting picture distortion should not occur but some of the display area may not be used leaving black bands at the top and bottom. • **Native Mode**, as the name implies, displays the picture in the actual pixel for pixel native format. The 1024 x 768 uses exactly 1024 pixels horizontally and exactly 768 pixels vertically and no anti-aliasing occurs. The picture is placed in the center of the display area. This will leave blank area bordering the picture displayed.
Warm Color	C1	Selecting this option sets the color to a warm white setting. This setting has more red than the C2 setting and is better for viewing pictures.
Cool Color	C2	Selecting this option sets the color to a cool white setting and is better for viewing text. This setting has less red than the C1.
Reset	R	Use this function to restore factory conditions.

Exit	EXIT	Use this feature to save your selections and adjustments and to exit the OSD menu.
Blue	B⊕	Use this function to adjust the picture's blue intensity.
Green	G⊕	Use this function to adjust the picture's green intensity.
Red	R⊕	Use this function to adjust the picture's red intensity.

Cleaning the Monitor

To keep the monitor looking new, periodically clean the monitor's case with a soft cloth. As a safety precaution, always unplug the monitor before cleaning it. Stubborn stains on the monitor's case can be removed using a damp, dust-free cloth and a mild detergent solution.

Caution: Never use strong solvents, such as thinner, benzene, or abrasive cleaners, because these will damage the monitor.

To clean the LCD screen, use a damp cloth; however, make sure the monitor has been turned off first. Never apply water directly to the LCD screen. Always apply the water to the cloth first, and then wipe down the screen. You can also purchase and use monitor wipes to clean the LCD screen.

MONITOR DRIVERS

During normal operation, your system will automatically detect your monitor, and Plug and Play drivers will automatically be installed.

If your application requires a specific monitor driver and color matching profile, these can be downloaded from the MPC Technical Support Site at http://support.buympc.com/index.html.

If you do not have Internet access, you may also call MPC Technical Support at (800) 877-8856 to request the files be sent to you.

WARRANTY INFORMATION

In the unlikely event that you have a failure with your MPC monitor, you can contact MPC Technical Support at http://support.buympc.com/index.html.

If you do not have Internet access, you may also call MPC Technical Support at (800) 877-8856. Technical Support will provide you with instructions for returning the failed monitor.

FEATURES

Energy Star Standards

This monitor may appear to be non-functional if there is no video input signal. For this monitor to operate properly there must be a video-input signal.

This monitor meets power management standards as set by the Video Electronics Standards Association (VESA) and/or the United States Environmental Protection Agency (EPA) and the Swedish Confederation Employees (NUTEK). This feature is designed to conserve electrical energy by reducing power consumption when there is no video input signal present. When there is no video input signal, this monitor, following a time-out period, will automatically switch to a low power consumption mode. This reduces the monitor's internal power supply consumption. After the video input signal is restored, full power is restored, and the display is automatically redrawn. The appearance is similar to a "Screen Saver" feature, except the display is completely off. The display is restored by pressing a key on the keyboard or clicking the mouse.

Plug & Play DDC1/2B Feature

This monitor is equipped with VESA DDC1/2B capabilities according to the VESA DDC STANDARD. These capabilities allow the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities. The communication channel is defined in two levels: DDC1 and DDC2B.

The DDC1 is a uni-directional data channel from the display to the host that continuously transmits EDID information. The DDC2B is a bi-directional data channel based on the I²C protocol. The host can request EDID information over the DDC2B channel.

See “Appendix E — Connector Pin Assignment” on page 20 for connector pin assignments.

APPENDIX A — TROUBLESHOOTING

If the following information does not successfully solve your issue, please visit the MPC Technical Support Site at http://support.buympc.com/index.html.

If you do not have Internet access, you may also call MPC Technical Support at (800) 877-8856.

Table 3: **Troubleshooting Monitor Issues**

Issue	Solution
The power indicator LED is not lit.	• Press the monitor power button once to see if the LED comes on. • Verify that the power cord is plugged in firmly and correctly.
The monitor is not detected by the system when it is connected.	• Verify the PC system is Plug & Play compatible. • Verify the Video Card is Plug & Play compatible. • Check the DB-15 plug on the Video Cable for bent pins.
The picture is fuzzy.	• Adjust the contrast and brightness controls. • Initiate the automatic calibration function by pressing the 'Auto' button.
The picture bounces or a wave pattern is present in the picture.	• Initiate the automatic calibration function by pressing the 'Auto' button. • Manually adjust the Clock and Focus controls for better picture.
The power LED is on (orange), but there is no video or picture.	• Maker sure the computer's video card is completely seated in the slot. • Make sure the monitor's video cable is properly connected to the computer. • Inspect the monitor's video cable and make sure that none of the pins are bent. • Make sure the computer is operational by pressing the [Caps Lock] key on the keyboard while observing the Caps Lock LED. The LED should either turn on or off after you press the [Caps Lock] key.

	• Your computer may be in a low power state. Move the system's mouse and press several keys on the keyboard to wake the system.
The monitor's picture is missing one of the primary colors (red, green, or blue).	• Inspect the monitor's video cable and make sure that none of the pins are bent.
The screen image is not centered or sized properly.	• Adjust pixel frequency (Clock) and Focus, or press the Auto Config button.
The picture has color defects (white does not look white).	• Adjust the RGB color or select a color temperature.
The picture has poor brightness or contrast.	• The lifetime of the back-light is limited. After 10,000 hours of use, the luminance of the light may be reduced to half of its original value. Please send the monitor to an authorized service agent for service.
There are horizontal or vertical disturbances on the screen.	• Use a pattern with a repetitive dot pattern to manually adjust the Clock and Focus, or press the Auto Config button.

APPENDIX B — ON-SCREEN MESSAGES

Table 4: On-Screen Messages

Message	Action
“Cable Not Connected”	• Check that the signal cable is properly connected. If the connector is loose, tighten the connector screws. • Check the DB-15 plug on the video cable for bent pins or other damage.
“Input Not Supported”	• Your system may be set outside the display mode range of the monitor. Verify you are using a compatable display mode. See Table 5.

APPENDIX C — FACTORY PRESET TIMING

Table 5: Factory Preset Timing
Digital and Analog support are the same except where noted below.

Standard	Resolution	Horizontal Frequency	Vertical Frequency
DOS	640 x 400	31.469 kHz	70.0 Hz
	720 x 400	31.469 kHz	70.0 Hz
VGA	640 x 480	31.470 kHz	60.0 Hz
	640 x 480	35.000 kHz	72.0 Hz
	640 x 480	37.500 kHz	75.0 Hz
	640 x 480	43.200 kHz	85.0 Hz
SVGA	800 x 600	35.156 kHz	56.0 Hz
	800 x 600	37.879 kHz	60.0 Hz
	800 x 600	46.879 kHz	72.0 Hz
	800 x 600	49.725 kHz	75.0 Hz
	800 x 600	53.674 kHz	85.0 Hz
XGA	1024 x 768	56.476 kHz	60.0 Hz
	1024 x 768	60.020 kHz	70.0 Hz
	1024 x 768	60.241 kHz	75.0 Hz
	1024 x 768	68.677 kHz	85.0 Hz
SXGA	1280 x 1024	63.981 kHz	60.0 Hz
	1280 x 1024	79.976 kHz	75.0 Hz
	1280 x 1024	91.146 kHz	85.0 Hz
Other	1152 x 864	67.5 kHz	75.0 Hz
	1280 x 960	60.0 kHz	60.0 Hz
	1280 x 960	85.938 kHz	85.0 Hz

Note: Digital input is not supported at 1280 x 1024 @ 85 Hz or 1280 x 960 @ 85 Hz.

Note: 6:9 ratios are not supported by this display. Some are very close to VESA standard and will therefore attempt to display a picture but it will not do so successfully.

APPENDIX D — VESA MOUNTING

This monitor can be attached to a wall-mounting arm you purchase separately. This monitor has a 75 mm x 75 mm VESA compliant mounting pad. Use a wall mounting arm with this configuration ONLY.

Take care to properly support this monitor during this procedure so that damage to the LCD panel does not occur.

1. If the monitor is currently in use, turn it off and disconnect the power adapter.
2. Pull the screw covers off the back of the monitor.
3. Support the base and remove the screws.
4. Remove the base.
5. Follow the manufacturer's instructions to assemble the wall-mounting arm.

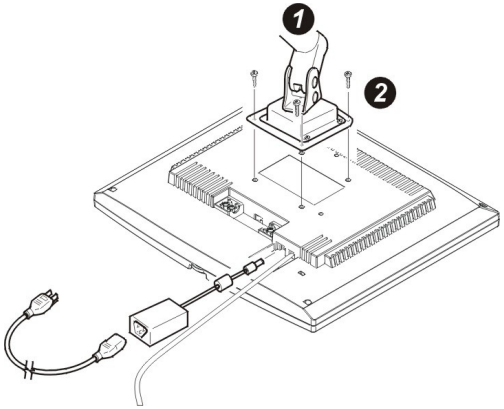

Figure 6: Installing an optional wall-mounting arm (not supplied)

Follow these steps to finish installing the wall-mounting arm:

1. Place the wall-mounting arm onto the back of the monitor. Line up the holes of the arm with the holes in the back of the monitor.
2. Insert the 4 screws into the holes and tighten.
   DO NOT OVERTIGHTEN
3. Insert the power cable into the slot on the back of the monitor.

APPENDIX E — CONNECTOR PIN ASSIGNMENT

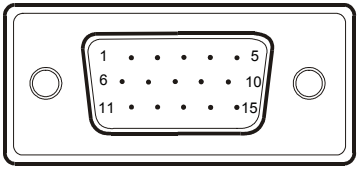

Figure 7: **15-pin Color Display Signal Cable**

Table 6: **Analog Video Cable Pin Assignments**

Pin #	Description	Pin #	Description
1	Red	9	+5V
2	Green	10	Detect Cable
3	Blue	11	NC
4	Ground	12	DDC-Serial Data
5	Ground	13	H-sync
6	R-Ground	14	V-sync
7	G-Ground	15	DDC-Serial Clock
8	B-Ground		

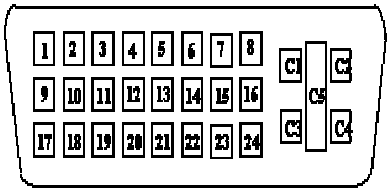

Figure 7: **24-pin DVI Signal Cable**

Table 8: **Digital Video Cable Pin Assignments**

Pin #	Description	Pin #	Description
1	TMDS RX2-	13	Floating
2	TMDS RX2+	14	+5V Power
3	TMDS Ground	15	Ground
4	Floating	16	Hot Plug Detect
5	Floating	17	TMDS RX0-
6	DDC Clock	18	TMDS RX0+
7	DDC Data	19	TMDS Ground
8	Floating	20	Floating
9	TMDS RX1-	21	Floating
10	TMDS RX1+	22	TMDS Ground
11	TMDS Ground	23	TMDS Clock+
12	Floating	24	TMDS Clock-

APPENDIX F — ACCEPTABLE LCD DEFECTS

Table 9: **Acceptable LCD Panel Defects**

Bright Dot Failures (Always On) Bright dots are tested with full screen black pattern (R.G.B. = 0,0,0)	• Maximum 5 red, green or blue bright dots (sub-pixels) • Maximum 3 green dots • Maximum 1 joined bright dots • Minimum distance between 2 bright dots: 10 mm
Black Dot Failures (Always Off) Black dots are tested with full screen white pattern (R.G.B.=255,255,255)	• Maximum 5 black dots • Maximum 2 joined (2 adjacent) black dots • Minimum distance between 2 black dots: 10mm • No defects allowed with 3 adjacent black dots
Total Dot Failures	• Maximum of 8 dots (including bright and dark dot defects)

APPENDIX G — MONITOR SPECIFICATIONS

Table 9: Monitor Specifications

LCD Panel	• Type: Dual Input TFT Active Matrix Color LCD • Size: 48.0 cm (19.0") • Viewable Size: 19.0” • Pixel pitch: 0.294 mm • Viewing angles: 170° (H) 170° (V) (Typical) • Response time: 25 ms (Typical) • Native Panel Resolution: 1280 x 1024 • Contrast Ratio: 500:1 (Typical) • Brightness: 250 nits (Typical)
Scan Range	• H-Frequency: Analog - 31 to 95 kHz Digital - 31 to 87 kHz • V-Frequency: Analog - 55 to 85 Hz Digital - 55 to 85 Hz
Pixel Clock	• Analog - 160 MHz • Digital - 140 MHz
Recommended Viewing Resolutions	• Minimum: 800 x 600 @ 60 Hz • Nominal: 1280 x 1024 @ 60 Hz • Maximum: 1280 x 1024 @ 75 Hz
Max. Resolution	• Analog: 1280 x 1024 @ 85Hz • Digital: 1280 x 1024 @ 75Hz
Display Colors	• 16.7 million Colors
Plug & Play	• VESA DDC1/2B™
EPA ENERGY STAR®	• On Mode: ≤60W • Off Mode: ≤3W
Input Connector	• Analog – 15 pin D-Sub • Digital – 24 pin DVI

Input Video Signal	Analog and Digital: • 0.7Vp-p (standard) • 75 OHM • Positive
Power Source	• AC Source: 100 – 240 VAC 50/60 Hz • DC Adapter: 12 VDC 5 A
Environmental Considerations	• Operating Temp: 0° to 40°C • Storage Temp: -20° to 60°C • Operating Humidity: 15% to 90%
Weight	• Shipping: 8.0 kg • Display Only: 6.5 kg • Display without Base (VESA mounting): 5.06 kg
Dimensions	• 429(W) x 448(H) x 203(D) mm
Regulatory Compliance	• UL, CSA, FCC, TÜV, CE
Security Measures	• Kensington Lock Compatible

APPENDIX H — FCC NOTICE

FCC Class B Radio Frequency Interference Statement

WARNING: (FOR FCC CERTIFIED MODELS) This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Plug the equipment into an outlet on a different circuit than the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Notice:

Any changes or modifications to the monitor not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibility of the user to correct such interference.

This product meets the ENERGY STAR® guidelines for energy efficiency.